


## Setting Up the SRC-VTA to Send E-Mail Notifications

Use the mailer processor to specify the SMTP server to use for e-mail messages that the SRC-VTA sends to subscribers.

To configure the mailer processor:

1. In the VTA Configuration Manager navigation pane, select **Edit**.
2. Under Current Configuration, select **Processors**.

A list of processors appears.

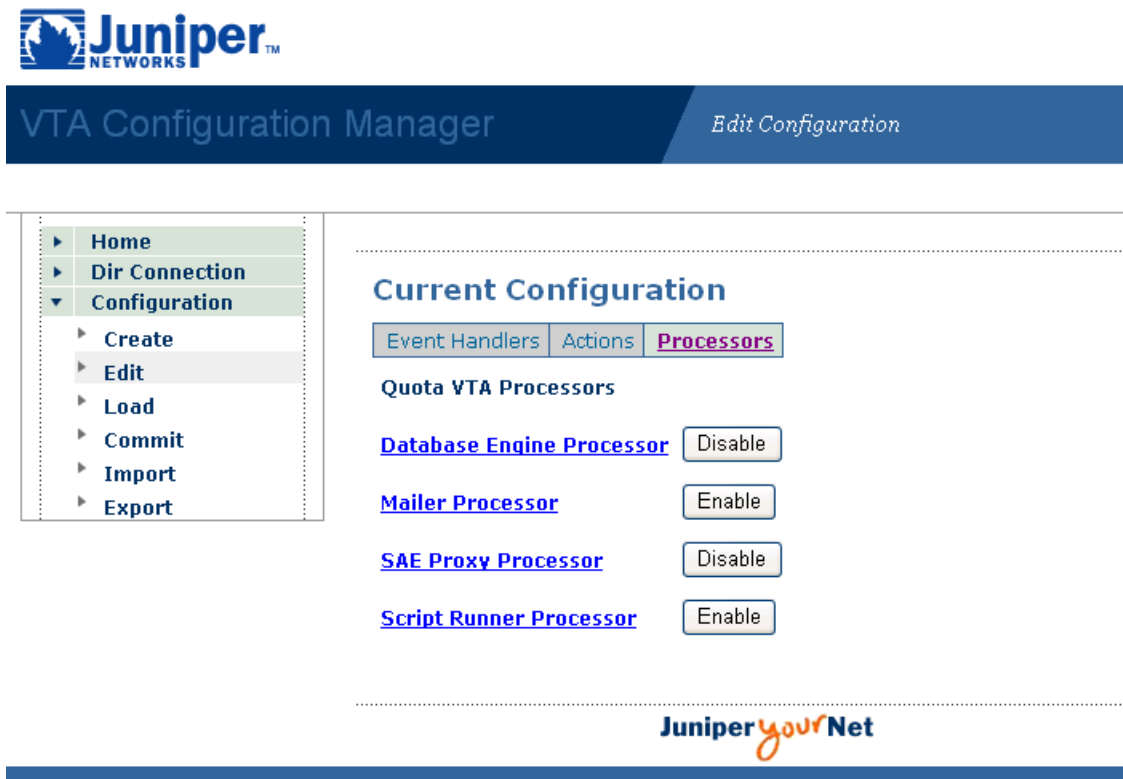

The screenshot displays the Juniper VTA Configuration Manager web interface. At the top left is the Juniper Networks logo. Below it, a dark blue header bar contains the text "VTA Configuration Manager" and "Edit Configuration". On the left side, a navigation pane lists options: Home, Dir Connection, Configuration (expanded), Create, Edit (highlighted), Load, Commit, Import, and Export. The main content area, titled "Current Configuration", has three tabs: Event Handlers, Actions, and Processors (selected). Under the "Processors" tab, there is a section "Quota VTA Processors" with four entries: "Database Engine Processor" (Disable button), "Mailer Processor" (Enable button), "SAE Proxy Processor" (Disable button), and "Script Runner Processor" (Enable button). At the bottom right of the main area is the "Juniper yourNet" logo.

3. Click **Enable** to enable the processor and display the configuration page for the mailer processor, or click **Mailer Processor**.

The Mailer Processor screen appears.

- Home
- Dir Connection
- Configuration
  - Create
  - Edit
  - Load
  - Commit
  - Import
  - Export


### Current Configuration

Event Handlers Actions **Processors**

Quota VTA Processors

**Mailer Processor**

| Name                                | Value                |
|-------------------------------------|----------------------|
| SMTP Server                         | <input type="text"/> |
| <input type="button" value="Save"/> |                      |



- Fill in the SMTP server box, and click **Save**.
- Configure an action for the mailer processor. See Configuring the SRC-VTA to Send E-Mail Notifications .

## Mail Processor Field

### SMTP Server

- SMTP server for outgoing e-mail.
- Value—Hostname or IP address of the SMTP server
- Default—No value