

Cutting and Pasting Configuration Information at the SRC CLI

You can also create a configuration by cutting and pasting existing portions of the configuration. You can copy configuration text from another source or from another part of the configuration to a new location. Use the cut and paste functions for your windowing system, such as X Windows.

