

## Setting the Language for the Terminal Environment for the SRC CLI

---

To set the language appropriate to the terminal environment:

- In operational mode, use the `set cli language language` command.

For *language* , specify the language and encoding in the following format:

2-character language code (lower case)\_2-character country code (upper case)

For example, en\_US.UTF8 (the default).

