

Changing the Password for the SRC CLI

To change the current password used to access the CLI:

- In operational mode, use the `set cli password` command.

```
user@host> set cli password
```



NOTE: If you are using a C-series Controller, the root password should have been changed from the default setting when the system was initially configured.
