

## Setting the SRC CLI Prompt

---

The default CLI prompt is `user@host>` in operational mode and `user@host#` in configuration mode.

To change the prompt:

- Use the `set cli prompt` command.

```
user@host> set cli prompt string
```

If the prompt string contains spaces, enclose the string in quotation marks (" ").

Specify the characters `\>` to have `>` appear at the end of the prompt in operational mode and `#` at the end of the prompt in configuration mode.

