

Setting the Screen Length for the SRC CLI

Typically, the terminal used to access the C-series Controller controls the length of the screen. Although you can change the value for the screen length, if the terminal supports reporting the screen size, the screen size reported by the terminal takes precedence.

To change the length of the CLI screen:

- Use the `set cli screen-length` command.

```
user@host> set cli screen-length length
```

