

Setting the Terminal Type for the SRC CLI

To set the terminal type:

- Use the `set cli terminal` command.

```
user@host> set cli terminal terminal-type
```

The terminal type can be one of the following: `ansi`, `vt100`, `xterm`, or `dumb`.

