

Displaying JPS Status (C-Web Interface)

To display the JPS status:

1. Click **Monitor > Component**.

The Installed Components pane appears.

2. Locate jps in the Name column. The Version and Status columns display the JPS status.

- Related Topics**
- Starting the JPS (C-Web Interface)
 - Restarting the JPS (C-Web Interface)
 - Stopping the JPS (C-Web Interface)
 - Modifying the JPS Configuration (C-Web Interface)
 - *SRC-PE Monitoring and Troubleshooting Guide*

