

Stopping the JPS

To stop the JPS:

```
user@host> disable component jps
```

The system responds with a shutdown message. If the JPS is not running when you issue the command, the system responds with the command prompt.

To start the JPS, see Starting the JPS.

