

Restarting the NIC (C-Web Interface)

To restart a NIC host:

1. Click **Manage > Restart**.
2. In the Component list in the main pane, select **NIC**, and click **OK**.

Related Topics ■ Stopping a NIC Host on a C-series Controller (C-Web Interface)

