

## Reloading the SAE Configuration

---

To reload the SAE configuration data from the directory:

```
user@host> request sae load configuration
```

The new configuration takes effect immediately.

- Related Topics**
- Reloading the SAE Data
  - Reloading Services

