

Monitoring the SDX SNMP Agent

To display the SDX SNMP agent status:

1. Click **Monitor > Component**.

The system responds with a status message.

