

## Enabling SRC Components

---

On a C-series Controller, you can enable all SRC components from the CLI.

You can enable the following SRC components from the CLI:

- Admission Control Plug-In (ACP)
- Service activation engine (SAE)
- C-Web
- Juniper Networks database
- Juniper Policy Server (JPS)
- Network Information Collector (NIC)
- Policy and Services Editor
- Redirect Server
- SNMP agent

To enable a component:

- In operational mode, use the `enable component` command. For example:

```
user@host> enable sae
```

