

## Replacing the Current Configuration with the Default SRC Configuration

---

To restore the full default SRC configuration:

- In configuration mode, enter the load factory-default command.

[edit]

user@host# **load factory-default**

This command removes the active configuration and replaces it with the basic, default SRC configuration.

