

## Viewing Information About Subscribers Obtained from External Applications (C-Web Interface)

**Purpose** View information about subscribers obtained from external applications with the C-Web interface.

**Action** To view information about subscribers obtained from external applications:

1. Click **ACP > Remote Update > Subscriber**.

The Remote Update/Subscriber pane appears.

The screenshot shows the Juniper C-Web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Configure' tab is active, and the left sidebar shows a tree structure with 'ACP' expanded. The main content area is titled 'Remote Update / Subscriber'. It contains a form with the following fields:

Field	Description	Value	Default
Device Name	Device name connected to subscriber.		No value
Nas Ip	NAS IP address of device connected to subscriber.		No value
Nas Port Id	NAS port ID of interface connected to subscriber.		No value
Phone	Subscriber phone number.		No value
Slot	Number of the slot for which you want to configure values.		0
Style	Output style.		detail
Subscriber Ip	Subscriber IP address.		No value

At the bottom of the form are 'OK' and 'Reset' buttons. The footer of the interface shows 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo.

2. In the Device Name box, enter the device name of the congestion point, or leave the box blank to display information about all devices.
3. In the NAS IP box, enter the NAS IP address of the device connected to the subscriber, or leave the box empty to display information about all subscribers.
4. In the NAS Port ID box, enter the NAS port ID connected to the subscriber, or leave the box empty to display information about all subscribers.
5. In the Phone box, enter the phone number of the subscriber, or leave the box blank to display information about all subscribers.
6. In the Slot box, enter the number of the slot for which you want to display external subscriber information.
7. Select an output style from the Style list.
8. In the Subscriber IP box, enter the subscriber IP address, or leave the box empty to display information about all subscribers.
9. Click **OK**.

The Remote Update/Subscriber pane displays the congestion points.

