

Viewing Congestion Point Information by DN

Purpose View congestion point information by DN.

Action To display information about congestion points added through an external application by DN:

```
user@host> show acp remote-update congestion-point dn
```

To display information about specific congestion points by DN:

```
user@host> show acp remote-update congestion-point dn congestion-point-dn  
congestion-point-dn
```

Enter a partial congestion point DN to list all matching congestion points.

To display congestion point DNs:

```
user@host> show acp remote-update congestion-point dn brief
```

By default, information about the congestion point attributes and congestion point bandwidth usage is displayed.

