

Viewing Information About Edge Congestion Points by DN

Purpose View information about edge congestion points by DN.

Action To view information about edge congestion points:

1. Click **ACP > Edge > Congestion Point > DN**.

The Edge/Congestion Point/DN pane appears.

The screenshot shows the Juniper J-Web interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar shows a tree view with 'ACP' expanded, and 'Edge / Congestion Point / DN' selected. The main content area displays the configuration for this section. It includes four input fields: 'Congestion Point Dn' (text box), 'Slot' (text box), 'Style' (dropdown menu), and 'Virtual Router Name' (text box). Each field has a description and default value. The 'Style' field has a dropdown menu with 'brief' and 'detail' options. At the bottom of the configuration area are 'OK' and 'Reset' buttons. The footer shows the copyright notice for Juniper Networks, Inc. and the Juniper logo.

Field	Description	Value	Default
Congestion Point Dn	DN of congestion point for which you want to list all matching congestion points.		No value
Slot	Number of the slot for which you want to configure values.		0
Style	Output style.		detail
Virtual Router Name	Name of virtual router from which to list congestion points.		No value

2. In the Congestion Point DN box, enter a congestion point DN, or leave the box blank to view information for all DNs.
3. In the Slot box, enter the number of the slot for which you want to display congestion point information.
4. Select an output style from the Style list.
5. In the Virtual Router Name box, enter a virtual router name to display information about a specific virtual router, or leave the box empty to display information about all virtual routers.
6. Click **OK**.

The Edge/Congestion Point/DN pane displays a list of congestion points.

