

Viewing General Statistics for SRC-ACP

Purpose View general statistics for SRC-ACP.

Action To view general statistics for SRC-ACP:

1. Click **ACP > Statistics > General**.

The Statistics/General pane appears.

The screenshot shows the Juniper Networks configuration interface. At the top, there are tabs for Monitor, Configure, Diagnose, and Manage. The user is logged in as 'admin'. On the left, a navigation menu lists various components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The main area displays the 'ACP' configuration page, specifically the 'Statistics / General' pane. This pane contains a 'Slot' input box with a value of 0. To the right of the input box, a tooltip explains: 'Number of the slot for which you want to configure values. Value: Currently, the chassis has only one slot. The valid value is 0. Default value: 0'. Below the input box are 'OK' and 'Reset' buttons. The footer of the interface shows the copyright notice for Juniper Networks, Inc. and the 'Juniper Your Net.' logo.

2. In the Slot box, enter the number of the slot for which you want to display general statistics.
3. Click **OK**.

The Statistics/General pane displays general SRC-ACP statistics.

