

Viewing Data for NIC Agents

Purpose To interpret the data for agents, make sure that you have a good understanding of the NIC resolution process.

See Overview of the NIC Resolution Process.

View all NIC resolver data.

Action user@host> show nic data agent

```
Component name
/agents/LoginNameVr
Key
  Type
Ip
  String
192.170.179.0
Value
  Type
Vr
  String
vorbis-13@prsim
Key
  Type
Ip
  String
192.170.179.3
Value
  Type
Vr
  String
vorbis-13@prsim
...
Key
  Type
Vr
  String
default@sys1
Value
  Type
SaeId
  String
IOR:
000000000000003549444C3A736D67742E6A756E697065722E6E65742F7361652F53657276696365
41637469766174696F6E456E67696E653A312E30000000000000200000000000007800010200
0000000C31302E3232372E362E34330022610000000000226761726B6269742E6B616E6C61622E6A
6E70722E6E65742F736165504F412F5341450000000000200000000000008000000004A414300
000000010000001C000000000010001000000010501000100010109000000010501000100000001
0000002C00000000000000001000000010000001C00000000000010001000000010501000100010109
0000000105010001
```

Meaning Table 1 on page 2 describes the output fields for the show nic data agent command. Output fields are listed in the order in which they appear.

Table 1: Output Fields for show nic data agent

Field Name	Field Description
Component name	Name of an agent. Agent names have the format <code>/agents/ agent-name</code> .
Key	Data type and value of a NIC key. The value is the actual value of the NIC key, not the NIC value to which the key maps.
Value	Data type and value of the NIC value that maps to the associated NIC key.