

Viewing Resolver Statistics

Purpose View statistics about resolvers.

Action 1. Click **Monitor > NIC > Statistics > Resolver**.

The Statistics/Resolver pane appears.

The screenshot shows the Juniper Networks GUI. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' tab is selected, and the left sidebar shows a tree view with 'NIC' highlighted. The main content area is titled 'Statistics / Resolver' and contains two input fields: 'Name' and 'Slot'. The 'Slot' field has the value '0'. Below the input fields are 'OK' and 'Reset' buttons. The bottom of the screen shows the copyright notice: 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo.

2. In the Name box, enter the name of the resolver for which you want to view statistics.
3. In the Slot box, enter the number of the slot for which you want to display resolver statistics.
4. Click **OK**.

The Statistics/Resolver pane displays the statistics for the resolver.

