

Viewing Statistics for All JUNOS Device Drivers (C-Web Interface)

Purpose View SNMP statistics about specific devices.

Action 1. Select **SAE** from the side pane, click **Statistics**, click **Device**, and then click **Common**.

The Common pane appears.

The screenshot shows the Juniper C-Web Interface. On the left is a navigation pane with a tree structure. The 'SAE' item is selected and highlighted in orange. The main content area is titled 'SAE' and 'Common'. It contains two input fields: 'Device Name' (a text box) and 'Type' (a dropdown menu). To the right of these fields is a help text area. Below the input fields are 'OK' and 'Reset' buttons. The footer of the interface shows the copyright notice for Juniper Networks, Inc. and the Juniper logo.

Monitor	Logged in as: admin	About	Refresh	Logout
ACP	SAE > Statistics > Device > Common			
CLI	Common			
Component				
Date	Device Name <input type="text"/>			
Disk	Name of a device. <i>Please enter:</i> All or part of the device name. For JUNOS router drivers and PCMM drivers, use the format default@routerName.			
Interfaces...	Type <input type="text"/>			
JPS	Display SNMP statistics for a specified device driver type. <i>Choices:</i> junos: Display SNMP statistics for JUNOS router drivers junose-cops: Display SNMP statistics for JUNOSe router drivers packetcable-cops: Display SNMP statistics for PCMM device drivers proxy: Display SNMP statistics for third-party drivers			
NIC	OK Reset			
NTP				
Redirect Server				
Route...				
SAE				
Security				
System				

Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy. Juniper Your Net.

2. In the Device Name box, enter a full or partial device name for which you want to display information, or leave the box blank to display all devices.
3. Select the **junos**JUNOS from the Type list:
4. Click **OK**.

The Common pane displays statistics for the specified device.

