

Viewing Statistics for All JUNOS_e Device Drivers (C-Web Interface)

Purpose To view SNMP statistics for all JUNOS_e device driver:

Action 1. Click **Monitor > SAE > Statistics > Device > Common**.

The Common pane appears.

2. Enter information as described in the Help text in the main pane, and click **OK**.

The Common pane displays statistics for the JUNOS_e device driver.

