

## Viewing Statistics for Specific Device Drivers with the CLI

---

**Purpose** View statistics for specific router drivers or device drivers.

**Action** To view SNMP statistics for JUNOS router drivers:

```
user@host> show sae statistics device common junos
```

To view SNMP statistics for JUNOSe router drivers:

```
user@host> show sae statistics device common junose-cops
```

To view SNMP statistics for PCMM device drivers:

```
user@host> show sae statistics device common packetcable-cops
```

To view SNMP statistics for third-party device drivers:

```
user@host> show sae statistics device common proxy
```

For example, to view SNMP statistics for JUNOS router drivers:

```
user@host> show sae statistics device common junos
```

### SNMP Statistics

Driver type	JUNOS
Number of close requests	0
Number of connections accepted	0
Number of current connections	0
Number of open requests	0
Server address	0.0.0.0
Server port	3333
Time since last redirect	0

