

Viewing Information About Device Drivers

Purpose View information about the device drivers available on the SAE.

Action 1. Click **Monitor > SAE > Drivers**.

The Drivers pane appears.

The screenshot shows the Juniper Networks SAE Drivers configuration page. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The 'Monitor' tab is selected, and the 'SAE' sub-tab is active. The 'Drivers' pane is displayed, containing a table with the following fields: 'Device Name' (text input), 'Maximum Results' (text input), 'Slot' (text input with a value of 0), and 'Style' (dropdown menu). Below the table are 'OK' and 'Reset' buttons. The left sidebar lists various system components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The bottom of the page shows the copyright notice: 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo.

2. In the Device Name box, enter a full or partial device driver name for which you want to display information, or leave the box blank to display all devices.

For JUNOSe router drivers, use the format:

< virtual router name > @ < router name >

For JUNOS router drivers and PCMM drivers, use the format:

default@<router name>

3. In the Maximum Results box, enter the maximum number of results that you want to receive.
4. In the Slot box, enter the number of the slot for which you want to display device information.
5. Select an output style from the Style list.
6. Click **OK**.

The Drivers pane displays the status of the devices running on the SAE.

