

Viewing Information About Licenses

Purpose View information about licenses.

Action 1. Click **Monitor > SAE > Licenses**.

The Licenses pane appears.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes tabs for Monitor, Configure, Diagnose, and Manage. The user is logged in as 'admin'. The left sidebar contains a tree view with categories like ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE, Security, and System. The 'SAE' category is expanded, and the 'Licenses' pane is selected. The main content area displays a 'Slot' input field with a value of 0. A tooltip explains that the valid value is 0 and the default is 0. Below the input field are 'OK' and 'Reset' buttons. The footer contains copyright information for Juniper Networks, Inc. and the slogan 'Juniper your Net.'

2. In the Slot box, enter the number of the slot for which you want to display license information.
3. Click **OK**.

The Licenses pane displays license information.

