

## Viewing SNMP Statistics for Specific Devices

**Purpose** View SNMP statistics about specific devices.

**Action** 1. Click **Monitor > SAE > Statistics > Device > Common**.

The Statistics/Device/Common pane appears.

The screenshot shows the Juniper SAE Statistics / Device / Common pane. The left sidebar has a tree view with 'Monitor' selected, and 'SAE' expanded. The main area contains three input fields: 'Device Name' (text box), 'Slot' (text box), and 'Type' (dropdown menu). To the right of these fields is a help area with descriptions and default values. At the bottom are 'OK' and 'Reset' buttons.

Field	Description	Default
Device Name	Name of a device. Value: All or part of the device name. • For JUNOS router drivers, use the format virtualRouterName@routerName. • For JUNOS router drivers and PCMM drivers, use the format default@routerName.	No value
Slot	Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0.	0
Type	Display SNMP statistics for a specified device driver type. Choices: junos: Display SNMP statistics for JUNOS router drivers junose-cops: Display SNMP statistics for JUNOS router drivers packetcable-cops: Display SNMP statistics for PCMM device drivers proxy: Display SNMP statistics for third-party drivers	No value

- In the Device Name box, enter a full or partial device name for which you want to display information, or leave the box blank to display all devices.
- In the Slot box, enter the number of the slot for which you want to display SNMP statistics for specific devices.
- Select a device type from the Type list:
  - junos—Displays SNMP statistics for JUNOS router drivers
  - junose-cops—Displays SNMP statistics for JUNOS router drivers
  - packetcable-COPS—Displays SNMP statistics for PCMM device drivers
  - proxy—Displays SNMP statistics for third-party drivers
- Click **OK**.

The Statistics/Device/Common pane displays statistics for the specified device.

