

## Viewing SNMP Statistics for Directory Connections

**Purpose** View SNMP statistics for directory connections.

**Action** 1. Click **Monitor > SAE > Statistics > Directory > Connections**.

The Statistics/Directory/Connections pane appears.

Monitor Configure Diagnose Manage Logged in as: admin Refresh Preferences About Logout

ACP CLI Component Date Disk Interfaces... Iptables... JPS NIC NTP Redirect Server Route... SAE Security System

SAE Statistics / Directory / Connections

Connection ID	<input type="text"/>	Directory connection ID. <i>Value:</i> All or part of the connection ID <i>Default:</i> No value
Slot	<input type="text"/>	Display SAE information for a specified slot. <i>Value:</i> Currently the chassis has only one slot. The valid value is 0. <i>Default:</i> 0
Style	<input type="text"/>	Output style <i>Choices:</i> brief: Display only directory connection IDs <i>Default:</i> Detail

OK Reset

Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy. Juniper Your Net.

2. In the Connection ID box, enter a full or partial connection ID for which you want to display information, or leave the box blank to display all SNMP statistics for all directory connections.
3. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for directory connections.
4. Select an output style from the Style list.
5. Click **OK**.

The Statistics/Connections pane displays statistics for directory connections.

