

## Viewing SNMP Statistics for Client Licenses

**Purpose** View SNMP statistics for client licenses.

**Action** 1. Click **Monitor > SAE > Statistics > License > Client**.

The Statistics/License/Client pane appears.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area displays the 'SAE' section with the sub-path 'Statistics / License / Client'. Below this, there is a 'Slot' input box with a value of '0'. A tooltip explains: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. There are 'OK' and 'Reset' buttons below the input box. The footer contains the copyright notice 'Copyright © 2007, Juniper Networks, Inc. All Rights Reserved. Trademark Notice. Privacy.' and the Juniper logo.

2. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for client licenses.
3. Click **OK**.

The Statistics/License/Client pane displays statistics for client licenses.

