

Viewing SNMP Statistics for Local Licenses

Purpose View SNMP statistics for local licenses.

Action 1. Click **Monitor > SAE > Statistics > License > Local**.

The Statistics/License/Local pane appears.

The screenshot shows the Juniper Networks configuration interface. The top navigation bar includes 'Monitor', 'Configure', 'Diagnose', and 'Manage'. The user is logged in as 'admin'. The left sidebar lists various components: ACP, CLI, Component, Date, Disk, Interfaces..., Iptables..., JPS, NIC, NTP, Redirect Server, Route..., SAE (highlighted), Security, and System. The main content area is titled 'SAE Statistics / License / Local'. It contains a 'Slot' input field with a value of '0'. A tooltip explains: 'Display SAE information for a specified slot. Value: Currently the chassis has only one slot. The valid value is 0. Default: 0'. Below the input field are 'OK' and 'Reset' buttons. The footer shows the copyright notice for Juniper Networks, Inc. (© 2007) and the 'Juniper your Net.' logo.

2. In the Slot box, enter the number of the slot for which you want to display SNMP statistics for local licenses.
3. Click **OK**.

The Statistics/License/Local pane displays statistics for local licenses.

