

## SRC CLI Commands to View NIC Resolution Data

You can view the data that NIC uses during a resolution. You can view all resolution data, or data for a specified NIC component. Table 1 on page 1 lists the commands you use to view NIC resolution information.

**Table 1: Commands to Display NIC Data**

Command	Output Displayed
show nic data	All NIC data. The output for this command includes the output for the other <b>show nic data</b> commands.
show nic data maximum-results	All or a specified quantity of NIC resolution data.
show nic data agent	NIC resolution data for a specified agent.
show nic data resolver	NIC resolution data for a specified resolver.
show nic data slot	All NIC data for a specified slot. The output for this command includes the output for the <b>show nic data agent</b> and <b>show nic data resolver</b> commands.

- Related Topics
- Testing a NIC Resolution (SRC CLI)
  - SRC CLI Commands to View Statistics About NIC Operations
  - Viewing Data for NIC Resolvers
  - Viewing Data for NIC Agents

