

## SRC CLI Commands to View Statistics About NIC Operations

You can view statistics for the NIC process and for various NIC components. Table 1 on page 1 lists the commands you use to view NIC statistics.

**Table 1: Commands to Display NIC Statistics**

Command	Output Displayed
show nic statistics	All NIC statistics. The output for this command includes the output for the other <code>show nic statistics</code> commands.
show nic statistics agent	NIC statistics for agents.
show nic statistics host	NIC statistics for a NIC host.
show nic statistics process	NIC statistics for the NIC process.
show nic statistics resolver	NIC statistics for resolvers.
show nic statistics slot	All NIC statistics for a specified slot. The output for this command includes the output for the <code>show nic statistics agent</code> , <code>show nic statistics host</code> , <code>show nic statistics process</code> , and <code>show nic statistics resolver</code> commands.

- Related Topics
- [Configuring the NIC \(SRC CLI\)](#)
  - [Locating Subscriber Management Information](#)
  - [Viewing Statistics for the NIC Process](#)
  - [Viewing Statistics for a NIC Host](#)
  - [SRC CLI Commands to View NIC Resolution Data](#)

