

Chassis Performance Traps

Table 1 on page 1 lists the performance traps for chassis events.

Table 1: Performance Traps–Chassis

			Alarm Threshold Levels (default values)				
Trap Event	Trap ID	Text Displayed	Critical	Major	Minor	Interval(sec)	R/AV
diskUsage	302	\$S:diskUsage: directory (juniSdxDiskPath) uses up to (juniSdxDiskUsedPercentage) of disk space. This exceeded (THRESHOLD).:RAISE	95 % of MAX	90 % of MAX	80 % of MAX	60	AV

- Related Topics**
- Performance Traps
 - Trap Numbers in Performance Traps
 - Configuring Performance Traps

