

Configuring Initial Directory Eventing Properties for SRC-ACP

To configure initial directory eventing properties:

1. Click **Configure > Slot > Slot:0 > ACP > Initial > Directory Eventing**.

The Directory Eventing pane appears.

2. Enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- For more information about configuring local properties for the SRC components, see [Configuring Local Properties for the SAE \(SRC CLI\)](#).
 - [Configuring Local Properties for SRC-ACP](#)
 - [Configuring SRC-ACP Properties \(C-Web Interface\)](#)
 - [Configuring SRC-ACP \(C-Web Interface\)](#)
 - [Viewing General Statistics for SRC-ACP \(C-Web Interface\)](#)

