

Configuring Initial Properties for SRC-ACP

To configure initial properties for SRC-ACP:

1. Click **Configure > Slot > Slot:0 > ACP > Initial**.
2. If desired, specify the properties for ACP as described in the Help text in the main pane, and click **Apply**.

