

## Configuring SRC-ACP as an External Plug-In

---

To configure SRC-ACP as an external plug-in for the SAE:

1. Click **Configure > Shared > SAE**, and then expand the SAE group for which you want to configure a plug-in.

The Group pane appears.

2. From the side pane, expand **Configuration > Plug Ins**.

The Plug Ins pane appears.

3. In the Create new list, select **Name**.
4. Type a name for the new plug-in in the dialog box, and click **OK**.

The plug-in appears in the side pane and in the Plug In pane.

5. From the side pane, expand the new plug-in, and then click **External**.

The External pane appears.

6. Click **Create**, enter information as described in the Help text in the main pane, and click **Apply**.

