

Configuring a Local User Template

To configure a local user template and specify the privileges that you want to grant to the local users to whom the template applies:

1. Click **Configure**, expand **System**, then click **Login**.

The Login pane appears.

2. From the Create new list, select **User**.
3. Type a name for the user in the dialog box, and click **OK**.

The User pane appears.

4. Enter information in the Class, UID, and Full Name boxes as described in the Help text, and click **Apply**.

Related Topics ■ Using Remote Template Accounts

