

## Using Remote Template Accounts

---

To configure the remote template account and specify the privileges that you want to grant to remote users:

1. Click **Configure**, expand **System**, and then click **Login**.

The Login pane appears.

2. From the Create new list, select **User**.
3. Type **remote** in the dialog box, and click **OK**.

The User pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

**Related Topics** ■ Configuring a Local User Template

