

## Configuring RADIUS and TACACS+ Authentication on a C-series Controller

---

The SRC software always performs password authentication on a C-series Controller. You can configure RADIUS and/ or TACACS + authentication to complement password authentication. In this case, the software performs RADIUS and or TACACS + authentication before password authentication.

To configure RADIUS and TACACS + authentication for users who access a C-series Controller:

1. Configure the connection to the RADIUS or TACACS + server.

See Configuring RADIUS Authentication (SRC CLI).

2. Configure the authentication order.

See A C-series Controller as a RADIUS Client and TACACS + Client .

3. Configure template accounts.

4. (Optional) Configure individual user profiles.

See Overview of SRC User Accounts.

- Related Topics**
- Configuring RADIUS and TACACS + Authentication on a C-series Controller (C-Web Interface)
  - Configuring TACACS + Authentication (C-Web Interface)
  - Removing an SRC Authentication Method from the Authentication Order
  - Example: Configuring SRC Authentication
  - A C-series Controller as a RADIUS Client and TACACS + Client

