

Specifying Connections to CMTS Devices (C-Web Interface)

To configure the policy server-to-CMTS interface (PKT-MM2) so that the policy server can communicate with CMTS devices:

1. Click **Configure**, expand **Slot > Slot: 0 > JPS**, and then click **CMTS Interface**.

The CMTS Interface pane appears.

2. Enter the information in the main pane as described in the Help text, and click **Apply**.

- Related Topics**
- Configuring Connections to RKSs
 - Specifying Connections to CMTS Devices
 - Modifying the JPS Configuration (C-Web Interface)
 - Viewing JPS RKS Statistics with the C-Web Interface
 - Viewing JPS CMTS Connections with the C-Web Interface

