

Configuring Logging Destinations for the JPS

By default, the JPS has four logging destinations.

Use the following configuration statements to configure logging destinations for the JPS:

```
slot number jps logger name ...
slot number jps logger name file {
    filter filter;
    filename filename;
    rollover-filename rollover-filename;
    maximum-file-size maximum-file-size;
}
slot number jps logger name syslog {
    filter filter;
    host host;
    facility facility;
    format format;
}
```

- Related Topics**
- Overview of the JPS
 - Modifying the JPS Configuration (C-Web Interface)
 - Configuring JPS to Store Log Messages in a File
 - Configuring JPS to Send Log Messages to System Logging Facility

