

Configuring Information to Test the Network Publisher

You can use an input file to verify that the network publisher is collecting information as configured or to set up a demonstration for an application.

To configure the network publisher to use an input file:

1. Enable the network publisher to use an input file for all routers or for a specific router.

Sample syntax for all routers:

```
[edit slot 0 network-publisher routers test-mode]
user@host# set enable-file-input
```

Sample syntax to collect information for a router named my-router:

```
[edit slot 0 network-publisher routers router my-router test-mode]
user@host# set enable-file-input
```

2. Run the network publisher.

```
user@host> request network-publisher execute
```

- Related Topics**
- Configuring Information to Test the Network Publisher (C-Web Interface)
 - Overview of the Network Publisher
 - Overview of Files to Test Network Publisher
 - Troubleshooting Network Publisher Operations

