

Before You Configure the NIC

When you use NIC in a client/server configuration, you configure the NIC scenario before you configure the NIC proxies.

Before you configure NIC hosts from the CLI:

- Plan your NIC implementation:
- Choose the NIC configuration scenario to use.

The default scenario is OnePop.

For information about NIC configuration scenarios and NIC agents, see [Locating Subscriber Management Information](#).

- Ensure that the appropriate type of router initialization script is configured for the router or network device.

See [Locating Subscriber Management Information](#).

Set the editing level for the configuration application you are using, the SRC CLI or the C-Web interface to basic. This ensures that only the statements that you need to configure are visible.

To set the editing level for the C-Web interface to basic:

- Click **Preferences > Level Basic**.

Related Topics

- [Configuring the NIC \(SRC CLI\)](#)
- [Configuring the NIC \(C-Web Interface\)](#)
- [Starting the NIC \(SRC CLI\)](#)
- [NIC Agents Used in the NIC Configuration Scenarios](#)
- [Router Initialization Scripts with NIC Configuration Scenarios](#)
- [Verifying Configuration for the NIC \(SRC CLI\)](#)

