

Configuring ICMP Conditions (C-Web Interface)

To configure ICMP conditions:

1. In the side pane, expand a traffic condition, and select **Icmp Condition**.
2. Click **Create**, enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Configuring ICMP Conditions (SRC CLI)
 - Configuring Protocol Conditions (C-Web Interface)
 - Configuring IGMP Conditions (C-Web Interface)

