

## Configuring Gigabit Ethernet Interfaces for IPv4 (C-Web Interface)

---

To allow remote access to the C-series Controller, you configure the Gigabit Ethernet interfaces. You can specify an IP address with mask or a broadcast address with mask for an interface.

To configure a Gigabit Ethernet interface for IPv4:

1. Click **Configure > Interfaces**.

The Interfaces pane appears.

2. From the Create new list, create an interface.
  - To create a new interface, select **Interface**, type a name for the new interface in the dialog box, and click **OK**.
  - To create an eth1, eth2, or eth3 interface, select **eth1**, **eth2**, or **eth3**, and click **OK**.
3. To specify the unit:
  - a. From the Create new list, select **Unit**.
  - b. In the dialog box, type a number for the new unit, and click **OK**.
4. To specify an IPv4 address for the new unit, expand **Unit: < number >**, and expand **Family** in the side pane.
  - a. In the side pane, click **Inet**.

The Interfaces pane appears.

- b. Click the **Create** button.
- c. Enter information as described in the Help text in the main pane, and click **Apply**.

- Related Topics**
- Configuring Loopback Interfaces for IPv4 (C-Web Interface)
  - Configuring Gigabit Ethernet Interfaces for IPv4 (C-Web Interface) on page 1
  - Configuring Gigabit Ethernet Interfaces for IPv6 (C-Web Interface)
  - Configuring Tunnel Interfaces (C-Web Interface)

