

Configuring a Static Route to Devices on Other Networks (C-Web Interface)

In some instances, the SRC software might need to connect to devices that reside on networks other than the one that the SRC software accesses directly. you can configure a static route for the software to be able to connect devices on other networks.

When you specify the IP address for a static route, include a mask.

To configure a static route to another network:

1. Click **Configure**, expand **Routing Options**, and click **Static**.

The Static pane appears.

2. From the Create new list, select **Route**.
3. In the dialog box, type a destination network/mask (using the form address/prefix length) for the new Route, and click **OK**.

The Route: *<name>* pane appears.

4. Enter information as described in the Help text in the main pane, and click **Apply**.

