

## Configuring the Location of Network Device Data

---

To configure SAE access to network device data:

1. Click **Configure**, expand **Shared > SAE**, and then click **Network Device Data**.

The Network Device Data pane appears.

2. Enter information as described in the Help text in the main pane, and click **Apply**.

