

Setting Up the SAE to Periodically Check JUNOS Configuration (C-Web Interface)

Use the following configuration statements to configure the SAE to periodically check the configuration of the JUNOS routing platform:

To configure the SAE to periodically check the configuration of the JUNOS routing platform:

1. Click **Configure**, expand **Shared > SAE > Configuration > Driver > JUNOS**, and then click **Configuration Checking**.

The Configuration Checking pane appears.

2. Click **Create**, enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- SAE Verification of JUNOS Configuration Changes
 - Configuring the SAE to Manage JUNOS Routing Platforms (C-Web Interface)

