

Configuring Logging Destinations

Use the following configuration statements to configure logging destinations for Diameter:

```
system diameter logger name ...

system diameter logger name file {
    filter filter;
    filename filename;
    rollover-filename rollover-filename;
    maximum-file-size maximum-file-size;
}
```

To configure logging destinations to store log messages in a file:

1. From configuration mode, access the configuration statement that configures the name and type of logging destination.

```
user@host# edit system diameter logger name file
```

2. Specify the properties for the logging destination.

```
[edit system diameter logger name file]
user@host# set ?
```

For more information about configuring properties for the logging destination, see [Configuring Logging Destinations to Store Messages in a File \(SRC CLI\)](#).

