

## Configuring the Diameter Server Properties

---

Use the following statements to configure the properties for the Diameter server:

```
system diameter server {  
    threads threads;  
    keep-alive-time keep-alive-time;  
}
```

To configure the Diameter server properties:

1. From configuration mode, access the configuration statement for the Diameter server.

```
user@host# edit system diameter server
```

2. (Optional) Specify the minimum number of threads to use.

```
[edit system diameter server]  
user@host# set threads threads
```

3. (Optional) Specify the time to wait for new commands.

```
[edit system diameter server]  
user@host# set keep-alive-time keep-alive-time
```

