

## Configuring Performance Traps (C-Web Interface)

---

To configure performance traps:

1. Click **Configure** > **SNMP** > **Notify** , and expand **Alarm** .
2. From the Create New box, select the category and associated traps, and click OK.

The Alarm pane appears.

3. Enter information as described in the Help text in the main pane, and then click **Apply**.

- Related Topics**
- Configuring Performance Traps
  - Configuring Event Traps (C-Web Interface)
  - Overview of SNMP Traps
  - For information about various SRC performance traps, see JPS Performance Traps

